



CNW-6017-1  
CNW-5781 (connector G) - Safety sensor for Infeed 1  
CNW-6016 (connector A)

A CONNECTOR			B, C CONNECTOR	
PIN NO.	SIGNAL	COLOR	PIN NO.	SIGNAL
1	VCC	RED	B1	VCC
		RED	C1	VCC
2	GND	WHITE	B2	GND
		WHITE	C2	GND

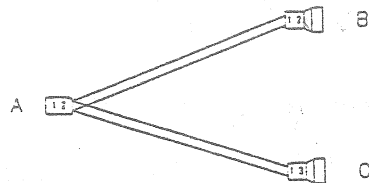


CNW-6018-1  
CNW-6014 - Door switch (Clear cover)  
Door switch (platter)

A, C CONNECTOR			B, C CONNECTOR	
PIN NO.	SIGNAL	COLOR	PIN NO.	SIGNAL
A1	DR1	BLACK	B1	DR1
A2	DR2	BLACK	C1	DR2
C2	DR3	BLACK	B2	DR3

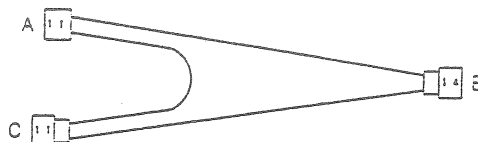

CNW-6019-1  
TPB-2500 (CN-3) - TPB-2522 (CN-1)  
TPB-2522 (CN-1)

A CONNECTOR			B, C CONNECTOR	
PIN NO.	SIGNAL	COLOR	PIN NO.	SIGNAL
1	VCC		B1	VCC
2	PCK		B2	CK
3	NC			
4	PCW		B3	CW/CCW
5	PPD1		B4	PD1
6	PPD2		B5	PD2
7	PHF		B6	HF
8	VCC		C1	VCC
9	SCK		C2	CK
10	SCW		C3	CW/CCW
11	SPD1		C4	PD1
12	SPD2		C5	PD2
13	SHF		C6	HF
14				

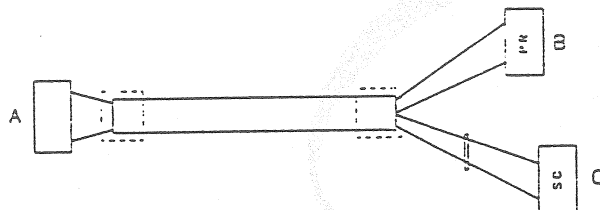

+5V  
- 2EGAR 1KHz od 300Hz do 1000Hz  
PRZOD-TYE

Hold OFF do MANY kral

Power	PD1	PD2
FULL	OFF	OFF
1/4	OFF	ON
1/2	ON	OFF

CNW-6055-1  
PTR665-00 (CN-1) - Fuse holder

A, C CONNECTOR			B CONNECTOR	
PIN NO.	SIGNAL	COLOR	PIN NO.	SIGNAL
A1	AC1	WHITE	1	AC1
A2	AC2	RED	2	AC2
C	E	GRE/YELL		

